


AGRITUF FITTING GUIDE: SUPERRIP AGGRESSIVE POINTS



Guide compatible with CaselH machines

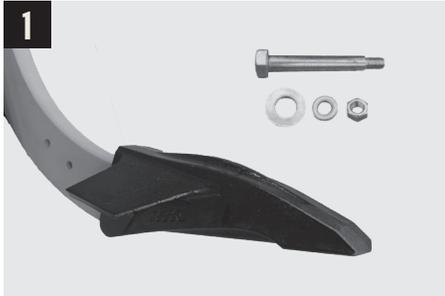

1
Double check you have the correct bolts for the part.




2
Slide the ripper point onto the shank, lining up the bolt holes.




3
Fit the bolt through the lined up holes of the point and shank.



4
Place a washer on each end of the bolt and fasten with a lock nut, retaining the ripper point onto the shank.

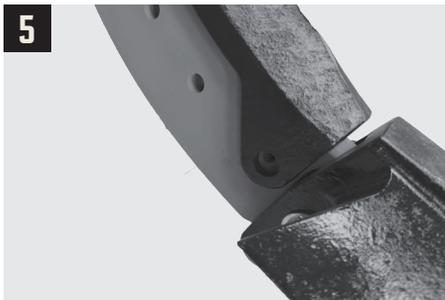

5
Place the shank protector on the shank, lining up the top and bottom bolt holes.

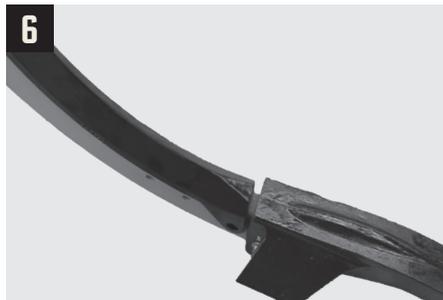


6
Install a roll pin through each of the two holes, securing the shank protector onto the shank.

TRIAL PARTS
PLACEMENT

MAKE AGRITUF DO THE HARD YARDS

To see what Agrituf can really do, fit trial parts in the highest wear zones on your machine:

1. Behind the wheel track
2. On the outer edge

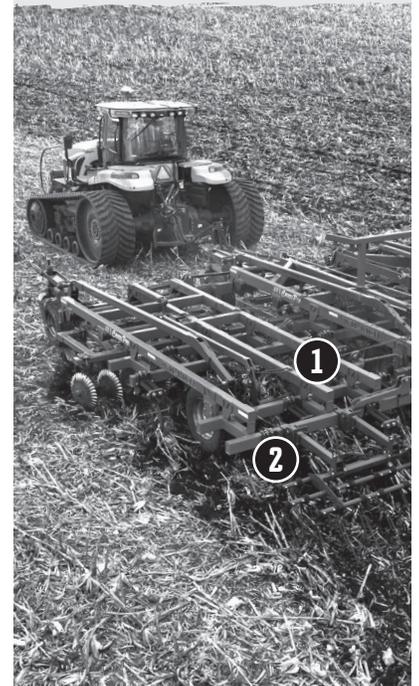

IMPORTANT: Do not over-tighten bolts using impact wrenches – this can lead to metal fracture. Check bolt tightness after 100 acres.

GENERAL CARE



Agrituf's superior edge is thanks to engineering and our unique metal blend. Here are our tips to keep Agrituf points performing at their peak.

TREAT 'EM LIKE A BABY

Agrituf points are tough. But they're for soil. Not concrete and other man-made surfaces. Dropping them on those could cause damage.

KEEP MAINTENANCE UP

While Agrituf points will outlast our competitors, they do still wear. To get the best results, regularly check and maintain your equipment – it'll pay off.

FASTENER GUIDE

ATSRC10A-112	10" Aggressive Style Ripper to suit 1½" Case Shank	1x ½"x2½" UNC Grade 5 Hex Bolt + Distorted Thread Flange Nut
ATSRC7A-112	7" Aggressive Style Ripper to suit 1½" Case Shank	1x ½"x2½" UNC Grade 5 Hex Bolt + Distorted Thread Flange Nut
ATSRC7A-114	7" Aggressive Style Ripper to suit 1¼" Case Shank	1x Agrituf Bolt Kit

TORQUE TO SPEC

Torque makes all the difference. Ensure your parts are secure on the shank or tine, but be careful not to over tighten. Over tightening can cause an uneven fit to the shank and, in some cases, cause stress fractures.

TRIP LOADS COUNT

Depending on the Agrituf part, remember to ensure that your machine is set to the correct trip load. (You'll find this in the individual part fitting guide.)

CHECK THE BOLTS

Most of our parts come with bolts, but you may need to replace or provide your own for some. Check that the correct size and grade is used, to ensure they fit in the recessed bolt holes.